

# TRACEABLE® FLIP-STICK™ THERMOMETER INSTRUCTIONS

## SPECIFICATIONS:

Display: ¾" LCD  
Range: -58 to 572 °F / -50 to 300 °C  
Resolution: 0.1° from -20 to 200, 1° outside this range.  
Accuracy: **Cat. No. 4272** ±0.3°C  
**Cat. No. 4372** ±1.0°C  
Sampling Rate: 1 second  
Features: Moving head with adjustable angle of 45/90/135/180°, stainless steel sensor probe, memory recall, temperature (°F/°C) selectable, data hold/test function, low battery indicator, and 16" Lanyard

## CONTROLS/INDICATORS

H/T -hold/test  
F/C -temperature selection  
MAX/MIN - Minimum and maximum temperature recorded.

## OPERATION

1. Extend probe to 45/90/135/180° to switch on the unit.
2. Press F/C button to select the desired temperature units.
3. Press H/T button once "HOLD" flashes on the display to retain reading for recording. Press H/T again to release and return display to current reading.
4. Press MAX/MIN button once. "MIN" sign displays representing the minimum temperature tested. Press MAX/MIN button again. "MAX" sign shows to indicate the maximum temperature testing. Current reading will restore automatically after 3 seconds.

## ALL OPERATIONAL DIFFICULTIES

If this unit does not function properly for any reason, replace the battery with a new high-quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

## BATTERY REPLACEMENT

Erratic readings, a faint display, no display, or a battery icon appearing on the display are all indicators that the battery must be replaced. Slide the panel on the back of the unit in the direction of the arrow. Replace exhausted battery with a new alkaline AAA battery. Slide the battery compartment cover back into place.