

Register your instrument! www.eppendorf.com/myeppendorf



HeatSealer S200

Operating manual

Copyright© 2015 Eppendorf AG, Germany. All rights reserved, including graphics and images. No part of this publication may be reproduced without the prior permission of the copyright owner.

Eppendorf® and the Eppendorf logo are registered trademarks of Eppendorf AG, Germany.

Registered trademarks and protected trademarks are not marked in all cases with $^{\circledR}$ or $^{\intercal M}$ in this manual.

Table of contents

1	Opera	ting instructions
	1.1	Using this manual
	1.2	Danger symbols and danger levels
		1.2.1 Danger symbols
		1.2.2 Danger levels
	1.3	Symbols used
2	Safety	,
	2.1	Intended use
	2.2	Warnings for intended use
	2.3	Warning signs on the device 8
	2.4	User profile
	2.5	Information on product liability
		,
3	Produ	ct description
	3.1	Delivery package9
	3.2	Features9
	3.3	Main illustration
4	Install	lation
	4.1	Preparing installation
	4.2	Selecting the location
	4.3	Changing the voltage
	4.4	Connecting the device
5	Opera	tion
	5.1	Overview of operating controls
	5.2	Parameter settings
		5.2.1 Setting the temperature15
		5.2.2 Setting the sealing duration
	5.3	Sealing the plate
	5.4	Switching the audible alert on/off19
6		leshooting
	6.1	Thermal fuse triggered
	6.2	The device cannot be switched on or does not heat up 20
7	Maint	00000
/		enance
	7.1	Cleaning
	7.2	Disinfection/Decontamination
	7.3	Replacing fuses

8	Techr	nical data	24
9	Trans	port, storage and disposal	25
	9.1	Decontamination before shipment	
	9.2	Transport	25
	9.3	Storage	
	9.4	Disposal	26
10	Orde	ring information	27
	Certif	ficates	29

1 **Operating instructions**

1.1 Using this manual

- ▶ Read this operating manual completely before using the device for the first time. Also observe the instructions for use of the accessories.
- ▶ This operating manual is part of the product. Thus, it must always be easily accessible.
- ▶ Enclose this operating manual when transferring the device to third parties.
- ▶ You will find the current version of the operating manual for all available languages on our webpage under www.eppendorf.com.

1.2 Danger symbols and danger levels

The safety instructions in this manual appear with the following danger symbols and danger levels:

1.2.1 Danger symbols

	Hazard point	Hot surface
4	Electric shock	Biohazard
**	Material damage	

1.2.2 Danger levels

DANGER	Will lead to severe injuries or death.
WARNING	May lead to severe injuries or death.
CAUTION	May lead to light to moderate injuries.
NOTICE	May lead to material damage.

Operating instructions
HeatSealer S200
English (EN)

Symbols used 1.3

Depiction	Meaning
1.	Actions in the specified order
2.	
→	Actions without a specified order
•	List
Text	Display text or software text
0	Additional information

2 Safety

2.1 Intended use

The Eppendorf HeatSealer S200 is used to seal plates using suitable films and foils.

The Eppendorf HeatSealer S200 can be used in training/routine/research labs in the life sciences, industry and chemistry sectors. The device may only be used for research purposes. Eppendorf does not provide a warranty for other applications. Not suitable for use in diagnostics or therapeutics.

2.2 Warnings for intended use



WARNING! Damage to health due to infectious liquids and pathogenic germs.

- ▶ When handling infectious liquids and pathogenic germs, observe the national regulations, the biological security level of your laboratory, the material safety data sheets, and the manufacturer's application notes.
- ▶ Wear personal protective equipment.
- ▶ For comprehensive regulations about handling germs or biological material of risk group II or higher, please refer to the "Laboratory Biosafety Manual" (source: World Health Organization, Laboratory Biosafety Manual, in its respectively current valid version).



CAUTION! Poor safety due to incorrect accessories and spare parts.

The use of accessories and spare parts other than those recommended by Eppendorf may impair the safety, functioning and precision of the device. Eppendorf cannot be held liable or accept any liability for damage resulting from the use of incorrect or non-recommended accessories and spare parts, or from the improper use of such equipment.

▶ Only use accessories and original spare parts recommended by Eppendorf.



NOTICE! Spilled liquid can cause damage to the device.

- ▶ Switch the device off.
- ▶ Unplug the mains/power plug.
- ▶ Collect the spilled liquid. Observe the specifications for the liquid in the material safety data sheets.

2.3 Warning signs on the device

Warning sign	Meaning	
	CAUTION! Burns from hot surfaces. The metal surfaces of the heating plate reach temperatures of up to 200 °C.	
	▶ Do not touch the hot surfaces.	
	▶ Let the device cool down to ambient temperature before starting an inspection or repair work.	
PA DA	How to set the temperature range and sealing duration is described in the operating manual.	
	▶ Read the operating manual.	
	Only use the device with the plate adapter inserted.	

2.4 User profile

This device may only be operated by trained and skilled personnel.

Before using the device, read the operating manual carefully and familiarize yourself with the device's mode of operation.

2.5 Information on product liability

In the following cases, the designated protection of the device may be compromised. Liability for any resulting property damage or personal injury is then transferred to the operator:

- The device is not used in accordance with the operating manual.
- The device is used outside of its intended use.
- The device is used with accessories or consumables which are not recommended by Eppendorf.
- The device is maintained or repaired by people not authorized by Eppendorf.
- The user makes unauthorized changes to the device.

Product description 3

3.1 Delivery package

Quantity	Description
1	HeatSealer S200
1	Mains/power cord
1	Adapter for 96-well PCR plates
1	Fuse for 115 V
1	Operating manual

3.2 Features

The Heatsealer enables reliable and quick sealing of a multitude of plates.


The sealing duration and temperature can be set on the Heatsealer. The display shows a countdown during the sealing process.

Sealed plates protect samples against evaporation and are thus highly suitable for transporting or storing samples.

The HeatSealer S200 excels with the following features:

- Seals 96- and 384-well plates.
- Suitable for PCR and DWP plates and microplates.
- Suitable for plates of different heights and materials.
- Optimum sealing of plates using suitable films and foils through adjustable sealing temperature.
- Reproducible sealing results through adjustable sealing duration.
- An integrated thermostat prevents the device from overheating.

3.3 Main illustration

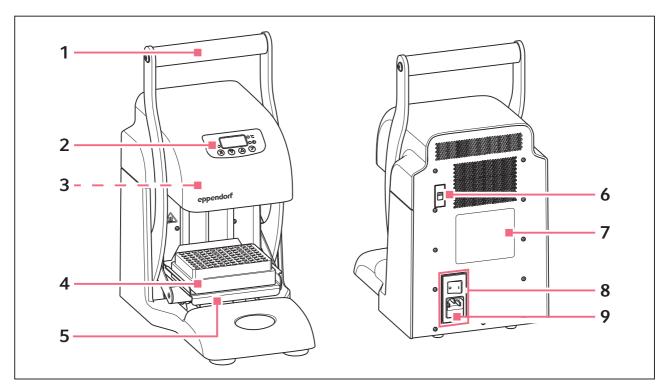

- 1 Handle
- 2 **Control panel**
- 3 Heating plate
- Plate adapter 4
- Adapter holder 5

- 6 Selector switch for mains/power supply voltage
- Name plate
- Mains/power cord socket with mains/ power switch
- **Fuse drawer**

4 Installation

- 4.1 Preparing installation
 - Store the transport packaging and packing material for future safe transport or storage.
- ▶ Use the details included in the delivery package to check that the delivery is complete .
- ▶ Check all parts for any transport damage.

4.2 Selecting the location

Select the device location according to the following criteria:

- Mains/power connection in accordance with the name plate
- Minimum distance to other devices and walls: 10 cm
- Resonance free table with horizontal even work surface
- The design of table is suitable for operating the device.
- Surrounding area must be well ventilated.
- The location must be protected against direct sunlight.
 - The mains/power switch and cutting unit of the mains/power line must be easily accessible during operation (e.g, residual current circuit breaker).
- 4.3 Changing the voltage



DANGER! Electric shock.


▶ Switch off the device and disconnect the power plug before starting maintenance or cleaning work.



NOTICE! Damage to device due to a fuse that does not match the preselected mains/power supply voltage.

- ▶ Use a fuse that matches the preselected mains/power supply voltage in accordance with the table.
- The device is supplied with a fuse for 230 V.


 If the device is to be converted for a mains/power supply voltage of 115 V, then the fuse must be replaced according to the table.

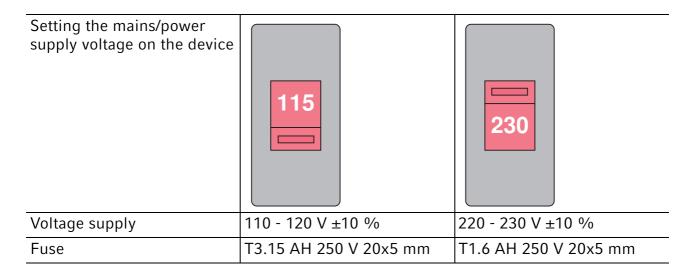

The selector switch for the mains/power supply voltage is located on the rear side of the device.



The mains/power cord socket with the mains/power switch is only sealed by a security sticker during delivery.

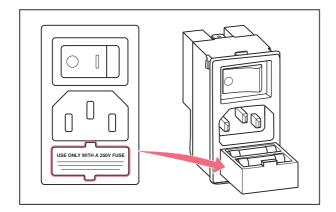

- 1. Remove the security sticker.
- 2. Set the mains/power supply voltage at the selector switch.
- 3. Open the fuse drawer using a suitable screwdriver and pull it right out.
- 4. Remove the fuse and the spare fuse, if there is one, from the fuse drawer.
- 5. Insert a fuse for the selected mains/ power supply voltage in the rear compartment.
- 6. Close the fuse drawer again.

4.4 Connecting the device



WARNING! Risk from incorrect supply voltage

- ▶ Only connect the device to voltage sources which correspond to the electrical requirements on the name plate.
- ▶ Only use sockets with a protective earth (PE) conductor and suitable power cable.



WARNING! Electric shock due to damage to device or mains cable.

- ▶ Only switch on the device if the device and mains cable are undamaged.
- ▶ Only use devices that have been properly installed or repaired.
- ▶ In case of danger, disconnect the device from the mains supply by pulling the power plug from the device or the mains socket or, by using the isolating device intended for this purpose (e.g., emergency stop switch in the laboratory).



NOTICE! Damage to electronic components due to condensation.

Condensate can form in the device after it has been moved from a cool environment to a warmer environment.


▶ After installing the device, wait at least for 12 h. Only then connect the device to the mains.

Prerequisites

- · Device is switched off.
- Electrical connection data in accordance with name plate.
- Voltage is switched on.
- Fuse matches selected voltage.
- ▶ Connect the mains/power cable included in the delivery.

5 5.1 Operation

Overview of operating controls

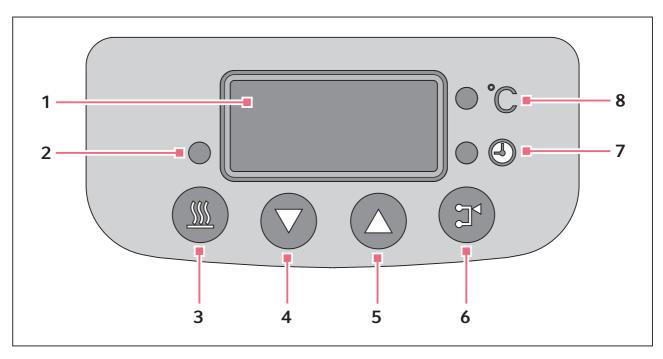


- 1 Display
- 2 heater status LED
- 3 heater key
- 4 down key

- up key 5
- 6 mode key
- 7 time LED
- temperature LED

	 The heating plate is switched on/off by means of the heater key. heater status LED does not illuminate Heating is off. heater status LED flashes Heating plate heats up. heater status LED illuminates
_	Set temperature has been reached.
	Display value is gradually reduced.
	Display value is gradually increased.

	The <i>mode</i> key is used to switch between two modes: • Setting the temperature • Setting the sealing duration
O °C	temperature LED illuminates temperature mode is selected. The temperature can be set.
	time LED illuminates time mode is selected. The sealing duration can be set.

 5.2 Parameter settings



5.2.1 Setting the temperature

- 1. Switch on the device.
- 2. Press the *mode* key until the *temperature* LED illuminates.
- 3. Use the *up* and *down* keys to set the desired temperature. The temperature can be set from 125 °C to 200 °C in 1 °C increments.

5.2.2 Setting the sealing duration

- 1. Press the *mode* key until the *time* LED illuminates.
- 2. Use the *up* and *down* keys to set the desired sealing duration. The sealing duration can be set from 1.0 s to 9.0 s in 0.5 s increments.

5.3 Sealing the plate



CAUTION! Crush hazard due to moving assemblies.

Risk of crushing your fingers or hands in case of improper operation.

- ▶ Do not place your fingers between the moving device components when sealing the plate.
- ▶ Do not keep hold of the foil during the sealing process.



CAUTION! Burns from hot surfaces.

The metal surfaces of the heating plate reach temperatures of up to 200 °C.

- ▶ Do not touch the hot surfaces.
- Let the device cool down to ambient temperature before starting an inspection or repair work.



NOTICE! Damage to device due to unsuitable consumables.

The metal surfaces of the heating plate reach temperatures of up to 200 °C. Consumables with a low temperature resistance can burn or melt.


- ▶ Only use consumables with a temperature resistance suitable for the sealing temperature.
- ▶ Do not exceed the optimum sealing duration.




The optimum height for sealing is set by means of the adapter.

▶ Make sure that adapter and plate match.


Adapter	Matching plates
Plate Adapter, high profile (not included in the HeatSealer delivery package)	96-well Microplates 384-well Microplates 384-well PCR Plates Deepwell Plate 384/200 µL Deepwell Plate 96/500 µL
96-well PCR Plate Adapter	96-well PCR Plates unskirted 96-well PCR Plates semi-skirted 96-well PCR Plates skirted
Plate Adapter, low profile (not included in the HeatSealer delivery package)	Deepwell Plate 96/1000 μL Deepwell Plate 96/2000 μL

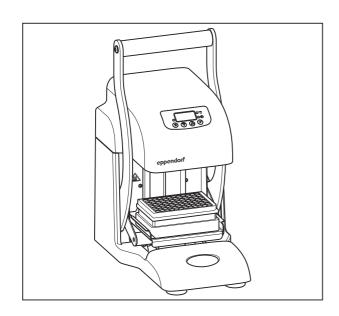

- 1. Switch on the device.
- 2. Insert adapter.
- 3. Set the temperature and sealing duration.
- 4. Press the *heater* key. The heater LED flashes and the heating plate heats up. It takes approx. 10 minutes to heat up. When it has reached the set temperature the *heater* LED illuminates constantly. The device is ready for operation.
- 5. Put the plate on the adapter.

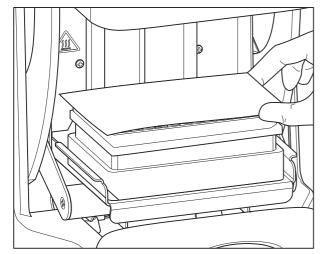

6. Position the foil on the plate. The foil must be laid with the sealing or adhesive side down on the plate.

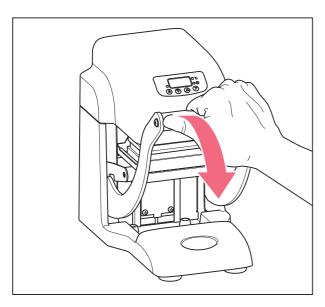

- 7. Press the handle down until the heating plate makes contact with the foil. Do not apply more force than is necessary. The device automatically detects when the heating plate has reached the correct position and starts the countdown for the sealing duration.
- 8. Hold a sufficiently strong contact between the heating plate and foil until the countdown has ended.



- 9. Shift the handle back to its starting position.
- 10.Let the sealed plate cool off.
- 11. Remove the plate.
- 12.If no other plates are to be sealed: Switch off the device.

5.4 Switching the audible alert on/off

The audible alert sounds when the sealing duration countdown starts or ends.

- 1. Switch on the device.
- 2. Press the *mode* key until the *temperature* LED illuminates.
- 3. Press the *heater* and *mode* keys simultaneously. The current setting of the audible alert is shown on the display.
 - 01: Alert switched on
 - 00: Alert switched off
- 4. Use the *up* and *down* keys to switch the alert on/off.
- 5. Press the *mode* key to save the setting.

6 **Troubleshooting**

6.1 Thermal fuse triggered

The device is equipped with a thermal fuse. When a temperature of 235 °C is exceeded on the heating plate, the thermal fuse triggers and switches the heating plate off permanently.

- ▶ Send the defective device to the authorized service center.
- 6.2 The device cannot be switched on or does not heat up
- 1. Check the mains/power plug and mains/power cord.
- 2. Check the set mains/power supply voltage and the fuse. Replace the fuse if it is defective.
- 3. Switch the device off and back on.
 - If none of these measures could eliminate the problem: A
 - ▶ Send the defective device to the authorized service center.

7 Maintenance

7.1 Cleaning

Regularly clean the housing of the device and the adapter.



DANGER! Electric shock as a result of penetration of liquid.

- ▶ Switch off the device and disconnect the power plug before starting cleaning or disinfection work.
- ▶ Do not allow any liquids to penetrate the inside of the housing.
- ▶ Do not spray clean/spray disinfect the housing.
- ▶ Only plug the device back in if it is completely dry, both inside and outside.



NOTICE! Damage from the use of aggressive chemicals.

- ▶ Do not use any aggressive chemicals on the device or its accessories, such as strong and weak bases, strong acids, acetone, formaldehyde, halogenated hydrocarbons or phenol.
- ▶ If the device has been contaminated by aggressive chemicals, immediately clean it by means of a mild cleaning agent.



NOTICE! Corrosion due to aggressive cleaning agents and disinfectants.

▶ Do not use corrosive cleaning agents, aggressive solvents or abrasive polishes.



NOTICE! Improper tools can cause damage.

Removing residuals on the heating plate with tools can destroy the heating plate.

▶ Only use a lint-free cloth to clean the device and the heating plate.

Aids

- · Lint-free cloth.
- Mild soap-based laboratory cleaner.
- Distilled water.

Cleaning the device

- 1. Switch off the device and disconnect it from the mains/power line.
- 2. Allow device to cool down.
- 3. Clean all exterior parts of the device and the adapter plate with a mild soap solution and lint-free cloth.
- 4. Wipe off the soap solution with distilled water.
- 5. Dry all cleaned parts.

7.2 Disinfection/Decontamination



DANGER! Electric shock as a result of penetration of liquid.

- ▶ Switch off the device and disconnect the power plug before starting cleaning or disinfection work.
- ▶ Do not allow any liquids to penetrate the inside of the housing.
- ▶ Do not spray clean/spray disinfect the housing.
- ▶ Only plug the device back in if it is completely dry, both inside and outside.
- 1. Switch off the device and disconnect it from the mains/power line.
- 2. Remove all cables and accessory parts from the device.
- 3. Clean the device with a mild cleaning agent before the disinfection.
- 4. Select a disinfection method that corresponds with the legal provisions and guidelines valid for your area of application.
 - Use e.g. alcohol (ethanol, isopropanol) or alcoholic disinfectant.
- 5. Wipe the surfaces with a lint-free cloth that has been moistened with disinfectant.
- 6. Disinfect all parts that are to be sent in with the device.

7.3 Replacing fuses



DANGER! Electric shock.

▶ Switch off the device and disconnect the power plug before starting maintenance or cleaning work.



NOTICE! Damage to device due to a fuse that does not match the preselected mains/power supply voltage.


▶ Use a fuse that matches the preselected mains/power supply voltage in accordance with the table.



The device is supplied with a fuse for 230 V. If the device is to be converted for a mains/power supply voltage of 115 V, then the fuse must be replaced according to the table.

Setting the mains/power supply voltage on the device	115	230
Voltage supply	110 - 120 V ±10 %	220 - 230 V ±10 %
Fuse	T3.15 AH 250 V 20x5 mm	T1.6 AH 250 V 20x5 mm

The selector switch for the mains/power supply voltage is located on the rear side of the device.

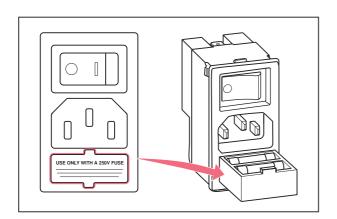

- 1. Switch off the device and disconnect the mains/power plug.
- 2. Open the fuse drawer using a suitable screwdriver and pull it right out.
- 3. Replace the defective fuse in the rear compartment.
- 4. Close the fuse drawer again.

Technical data 8

Weights and dimensions			
Weight	7.2 kg		
Dimensions	Width: 220 mm Depth: 325 mm Height: 425 mm		
Mains/power supply			
Voltage supply			
115:	110 - 120 V ±10 % / 50 Hz to 60 Hz ± 5%		
230:	220 - 230 V ±10 % / 50 Hz to 60 Hz ± 5%		
Power consumption, max.	350 W		
Degree of pollution	2 (IEC 664)		
Protection class	I		
Overvoltage category	II		
Fuses			
115:	T3.15 AH 250 V 20x5 mm		
230:	T1.6 AH 250 V 20x5 mm		
Ambient conditions			
For indoor use only			
Ambient temperature	+18 °C to +35 °C		
Relative humidity	20 % to 80 %		
Atmospheric pressure	Use up to a height of 2200 m above sea level		
Operating parameters			
Adjustable temperature range	125 °C - 200 °C in 1 °C increments		
Tolerance range	±2 °C		
Adjustable sealing duration	1.0 s - 9.0 s in 0.5 s increments		

9 Transport, storage and disposal

9.1 Decontamination before shipment

If you are shipping the device to the authorized Technical Service for repairs or to your authorized dealer for disposal please note the following:



WARNING! Risk to health from contaminated device

- 1. Follow the instructions in the decontamination certificate. You find it as a PDF file on our website (www.eppendorf.com/decontamination).
- 2. Decontaminate all the parts you would like to dispatch.
- 3. Include the fully completed decontamination certificate in the packing.

9.2 **Transport**

- ▶ Use the original packaging for transport.
- ▶ Use the transport securing devices.

	Air temperature		Atmospheric pressure
General transport	-10 °C -+50 °C	20 % – 95 %	300 hPa – 1060 hPa
Air freight	-10 °C – +50 °C	20 % – 95 %	300 hPa – 1060 hPa

9.3 Storage

	Air temperature		Atmospheric pressure
In transport packaging	-10 °C – +50 °C	20 % – 95 %	700 hPa – 1060 hPa
Without transport packaging	-10 °C – +50 °C	20 % – 95 %	700 hPa – 1060 hPa

9.4 Disposal

In case the product is to be disposed of, the relevant legal regulations are to be observed.

Information on the disposal of electrical and electronic devices in the European **Community:**

Within the European Community, the disposal of electrical devices is regulated by national regulations based on EU Directive 2012/19/EU pertaining to waste electrical and electronic equipment (WEEE).

According to these regulations, any devices supplied after August 13, 2005, in the business-to-business sphere, to which this product is assigned, may no longer be disposed of in municipal or domestic waste. To document this, they have been marked with the following identification:



Because disposal regulations may differ from one country to another within the EU, please contact your supplier if necessary.

Ordering information 10

Order no.	Order no.	Description
(International)	(North America)	·
		HeatSealer
		110 V – 230 V/50 Hz– 60 Hz
5391 000.001	5391000001	S100
5392 000.005	5392000005	S200
		Plate Adapter, low profile, for
		HeatSealer S200
5392 070.020	5392070020	
		96-well PCR Plate Adapter, for
		HeatSealer S200
5392 070.038	5392070038	
		Plate Adapter, high profile, for
		HeatSealer S200
5392 070.011	5392070011	
		Heat Sealing Film
0030 127.838	0030127838	100 pieces
		Heat Sealing Foil
0030 127.854	0030127854	100 pieces

Ordering information
HeatSealer S200
English (EN)

eppendorf

Declaration of Conformity

The product named below fulfills the requirements of directives and standards listed. In the case of unauthorized modifications to the product or an unintended use this declaration becomes invalid.

Product name:

HeatSealer S200

Product type:

Heatsealer

Relevant directives/standards:

2006/95/EC: EN 61010-1, EN 61010-2-010

2008/108/EC: EN 61326-1

2011/65/EU: EN 50581

UL 61010-1, CAN/CSA C22.2 No. 61010-1

FCC CFR 47 Parts 15.107 and 15.109, Class B

Date: August 08, 2014

Management Board

Portfolio Management

Your local distributor: www.eppendorf.com/contact Eppendorf AG · 22331 Hamburg · Germany eppendorf@eppendorf.com









Evaluate Your Manual

Give us your feedback. www.eppendorf.com/manualfeedback