



3M™ 6000 Series Full Face Mask

Care and Maintenance



To maintain protection levels, optimise the effective lifetime of the equipment and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Reusable Respirators.

Before Use

- Inspect respirator for incorrectly fitted and/or damaged parts. Replace if necessary
- Inspect the exhalation valve and seat. Any damaged or deteriorated valves should be replaced

- Do not use cleaning agents that contain lanolin or other oils
- If required disinfect by soaking in a solution of quaternary ammonia disinfectant or sodium hypochlorite (50ppm chlorine)
- Rinse in fresh warm water
- Air dry in a non-contaminated atmosphere

Monthly

- Carry out all the 'Before Use' inspections
- Check:
 - Face Seal
 - Nose Cup
 - Straps
 - Valves and Gaskets
 - Visor
- Create record of this monthly check

Ordering Consumables, Repair Parts and Accessories


To request a quote or place an order for these items, please contact your 3M Approved Distributor.

Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M™ Reusable Respirators, please contact the Helpline or your local 3M representative.

After Use

- Disassemble by removing the filters. The centre adaptor, lens and nose cup can also be removed if necessary
- Clean with 3M™ 105 wipe or by immersing in warm cleaning solution, and scrub with a soft brush until clean. Parts may also be cleaned in a washer. Water temperature not to exceed 50°C

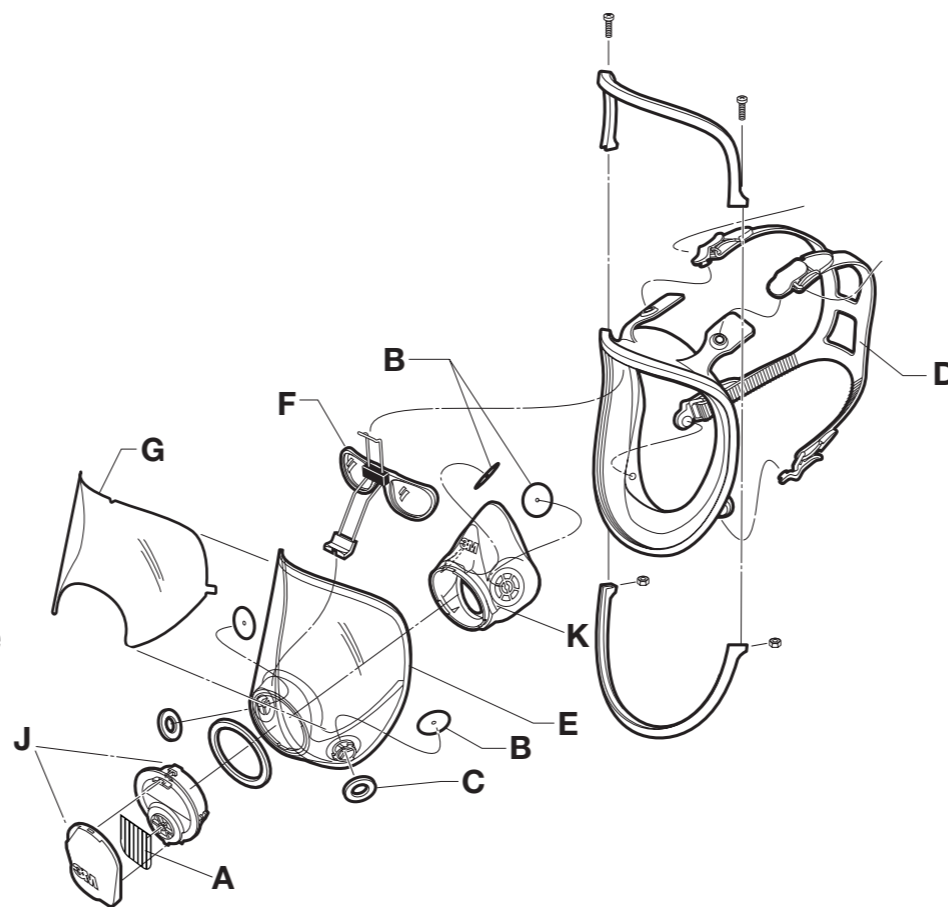

		3M Part Number
A	Exhalation Valve	7583
B	Inhale Valve	6893
C	Inhalation Gasket	6895
D	Head Harness Assembly Includes head harness and buckle	6897
E	Lens Assembly Includes lens, bayonet part fittings, inhalation valves and inhalation port gaskets	6898
F	Spectacle Kit	6878
G	Lens Cover Peel Offs	6885
J	Centre Adapter Assembly	6864
K	Nose Cup Assembly	6894

We've got
Safety Covered

3M Health & Safety Helpline
Monday - Friday 9 to 5

0870 60 800 60 UK
1 800 320 500 IRELAND

EAR
PELTOR

Occupational Health & Environmental Safety Group

3M United Kingdom plc
3M Centre,
Cain Road, Bracknell
Berkshire RG12 8HT
Tel: 0870 60 800 60
www.3M.co.uk/ohes

3M Ireland Limited
The Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

3M is a trademark of 3M Company
Please recycle. Printed in UK.
© 3M 2010. All rights reserved.

REPLACE ALL DAMAGED PARTS IMMEDIATELY TO ENSURE CORRECT LEVELS OF PROTECTION

