

**PRO.TECT Blue (GU004\*)**  
silicone free · chemical tested · blue · heavy weight nitrile · single use gloves

**Physical Specifications:**  
Material: Nitrile (latex free)  
Colour: Blue  
Length: 240 mm  
Weight: 5.0 g  
Thickness: 0.09 mm  
Finish: Powder free, chlorinated  
Fit: Ambidextrous  
Sterile: No

**Order Codes and Size Information:**  
GU0041 | Extra small  
GU0042 | Small  
GU0043 | Medium  
GU0044 | Large  
GU0045 | Extra large

**Packaging:**  
Each dispenser box contains 100 gloves  
Each case contains 10 dispenser boxes


**Classification:**

For more about the PRO.TECT range, please click on the image

- Features**
- Free from silicone
  - Tested to EN374
  - AQL 1.5 and EN455 parts 1-4
  - Free from latex
  - Ambidextrous
  - Nitrile formulation conforms to the hand during use
  - Beaded cuff
  - Manufactured with textured palms and fingertips
  - Heavy-weight construction
  - Touchscreen compatible

- Benefits**
- Silicone free formulation means no finger marks on metal and glass surfaces
  - Resistant to a range of chemicals
  - Meets medical standards including pinholes
  - Suitable for those with latex allergies (Type I sensitisation)
  - Ambidextrous fit means you don't have to split a pair to replace a damaged glove
  - Nitrile formulation conforms to the hand during use for a more comfortable fit
  - Beaded cuff provides extra strength during donning and helps prevent liquid roll back
  - Textured palms and fingertips provide improved grip, particularly when working in wet or oily conditions
  - Heavy-weight construction is tough, durable and long lasting
  - Suitable for use with mobile and tablet displays without removing gloves

- Sectors**
- Automotive • Automotive maintenance and repair
  - Chemical manufacture and use • Construction
  - Electronics • Engineering • Floristry and gardening
  - General assembly • Glass • Inspection • Laboratory work
  - Light duty maintenance • Maintenance
  - Manufacturing and assembly
  - Painting and decorating
  - Repair • Utility

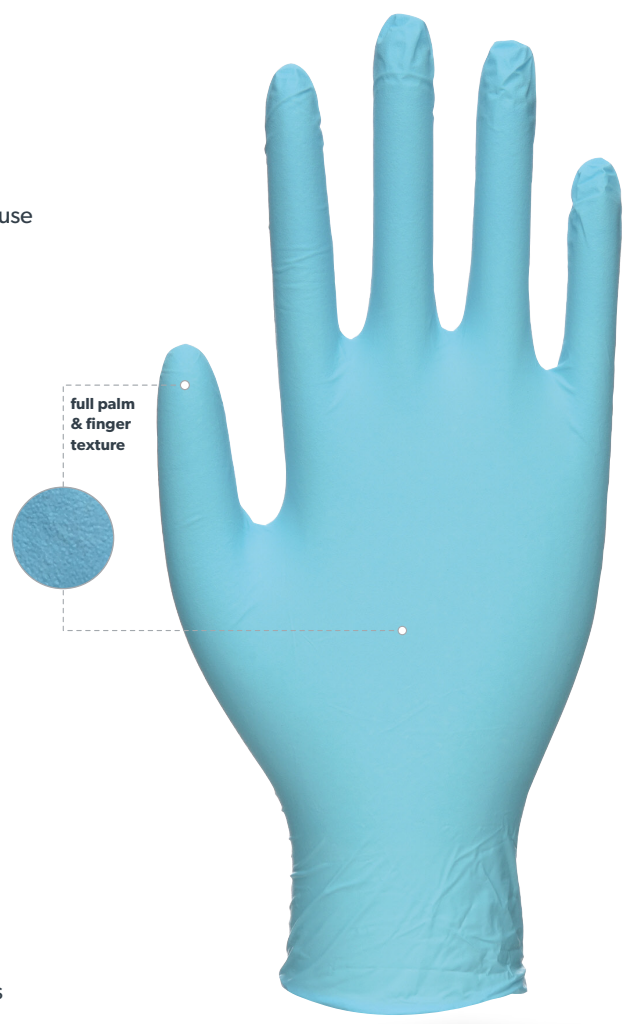

**UNIGLOVES UK**  
Registered in England No: 4010200  
VAT registration 791817787

3 Ambley Green, Gillingham Business Park,  
Gillingham, ME8 0NJ, UK  
+44 (0)800 049 6602  
enquiries@unigloves.co.uk  
unigloves.co.uk

**UNIGLOVES GERMANY**  
Arzt- & Klinikbedarf  
Handelsgesellschaft mbH

Camp-Spich-Straße 71  
D-53842 Troisdorf-Spich,  
+49 (0) 2241-9323-0  
unigloves@unigloves.de  
unigloves.de

