


STREAM EVO™

Riley®

Stream Evo safety glasses provide extreme comfort and 'wearability' with a range of lens options to suit a variety of conditions.

SPECIAL FEATURES

- ✓ Single wraparound polycarbonate lens
- ✓ Soft, ventilated TempFLEX™ temple tips provide a comfortable, secure fit
- ✓ Slim temples enhance comfort when worn with ear defenders
- ✓ Lateral protection
- ✓ 100% metal free
- ✓ Soft, adjustable, anti-slip nose bridge
- ✓ Supplied with a microfibre storage pouch
- ✓ Stream Evo Accessory Pack available separately. Contains adjustable headband and gasket
- ✓ Also available in a smaller size - see Stream™ Evo Small
- ✓ Also available without plastic packaging - see Stream™ (Evo) Eco

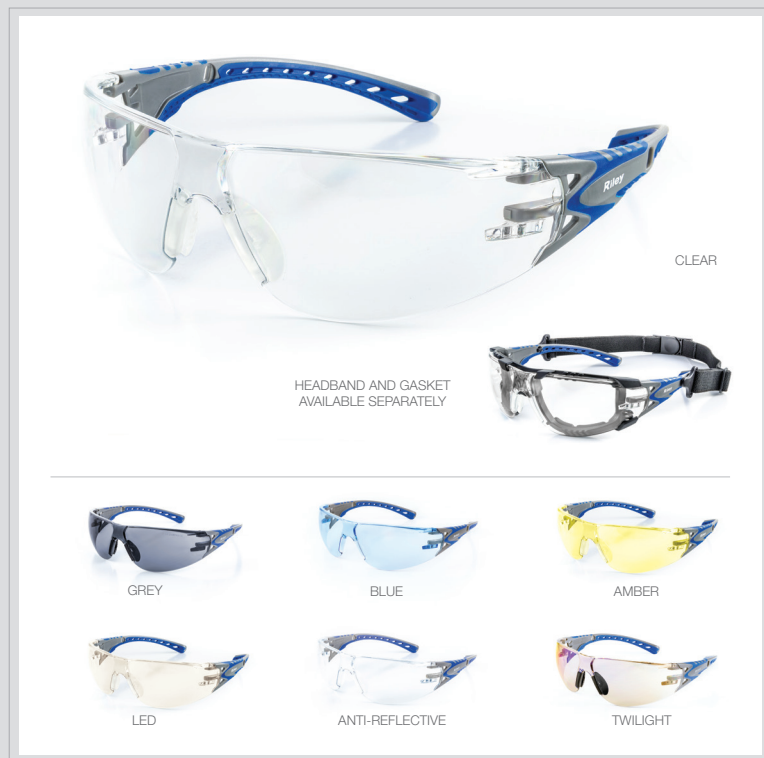

VERSIONS	REF.	LENS MARKING	FRAME MARKING	PROTECTION AGAINST	COATINGS
CLEAR	RLY00361	2C-1.2 e 1FTKN CE / Z87+ U6	e EN 166 FT CE / Z87+	Impacts, UV radiations	TECTON 400 K&N Anti-scratch and Anti-fog / UV400 / Moisture repellent
GREY	RLY00362	5-2.5 e 1FTKN CE / Z87+ U6 L2.5	e EN 166 FT CE / Z87+	Impacts, UV and Solar radiations	
BLUE	RLY00365	2-1.4 e 1FTKN CE / Z87+ U6	e EN 166 FT CE / Z87+	Impacts, UV radiations	
AMBER	RLY00371	2C-1.2 e 1FTKN CE / Z87+ U6	e EN 166 FT CE / Z87+	Impacts, UV radiations	
LED	RLY00369	2C-1.4 e 1FTKN CE / Z87+ U6	e EN 166 FT CE / Z87+	Impacts, UV radiations	Riley Translucent Mirror Coating. Moisture Repellent
ANTI-REFLECTIVE	RLY00363	5-1.7 e 1FT CE / Z87+ U6	e EN 166 FT CE / Z87+	Impacts, UV radiations	
TWILIGHT	RLY00364	5-1.7 e 1FT CE / Z87+ U6 L1.7	e EN 166 FT CE / Z87+	Impacts, UV radiations	
ACCESSORY PACK	RLYA0017	N/A	N/A	N/A	N/A
STREAM EVO ECO CLEAR	RLY00370	2C-1.2 e 1FT CE / Z87+ U6	e EN 166 FT CE / Z87+	Impacts, UV radiations	Riley Anti-scratch Anti-fog

See overleaf for this product's technical specification →

STREAM EVO™



GENERAL SPECIFICATION

LENS BASE	9.5mm
WEIGHT	23g

PACKAGING

Individually contained in a polythene bag with a Euroslet

PER BOX	10
PER CARTON	200

COMPONENT SPECIFICATION

COMPONENT	MATERIAL	FEATURES
LENS	Polycarbonate	One piece moulded lens with side protection
NOSE BRIDGE	Thermoplastic Elastomers (TPE)	Comfortable and flexible
TEMPLE	TR90 Thermoplastic / Thermoplastic Elastomers (TPE)	Co-injected - Robust, flexible, lightweight and ventilated
HINGE	TR90 Thermoplastic	Metal free and durable

LENS MARKINGS (CE)

LENS FILTER TYPE:

2, 2C UV
5 Solar

SCALE NUMBER (SHADE):

1.2 Clear or Amber 1.4 Blue or I/O Waterproof
1.7 Minimises or I/O 2.5 Grey or Revo

© Identity of manufacturer

OPTICAL CLASS:

1 High optical quality

MECHANICAL STRENGTH:

F Low energy impact, resists a 6mm, 0.86g ball at 45m/s
T Protection against high-speed particles at extreme temperatures

PERFORMANCE:

K Resistance to scratches by fine particles

N Resistance to fogging

CE Certification mark

FRAME MARKINGS

© Identity of manufacturer

EN 166: guaranteed minimum resistance of the protective eyewear against everyday risks including dropping the protective eyewear onto the ground, ageing by light exposure, exposure to heat or corrosion etc.

MECHANICAL STRENGTH:

F Low energy impact, resists a 6mm, 0.86 g ball at 45m/s

T Protection against high-speed particles at extreme temperatures

CE Certification mark

USA (ANSI)

LENS

U6 UV (Clear, Amber, Blue)

L1.7 Solar (I/O, Twilight)

L2.5 Solar (Grey)

LENS AND FRAME:

Z87+ High velocity impact, 0.25 inch, 1.04g ball at 150ft/s

CLEANING AND STORAGE

CLEANING: The lenses should be cleaned regularly.

MAINTENANCE: Pitted, scratched or damaged lenses must be replaced by replacing the complete product. If the frame is damaged also replace the complete product. After each use it is recommended to keep the spectacles or goggles in a microfibre pouch or rigid case.

STORAGE: All products must be stored in a dry and clean environment.

PART OF THE GLOBUS GROUP

Based on a substantial heritage of successfully protecting hands, Globus has grown to become one of the world leaders in worker safety, leading the way in technical innovation to provide a range of products that have set the standard for safety, productivity and wearer acceptance.

This focus on creating cutting edge personal protection solutions has now extended to eye and face protection with Riley; a new collection of high performance protective eyewear products engineered with innovation and ingenuity, designed for optimum comfort and styled for safe working.

Riley product approval certificates to CE standards will be provided on request. Riley is a registered trademark.

www.riley-eyewear.com

E: info@riley-eyewear.com

T: +44 (0)161 877 4747

F: +44(0)161 877 4746

Globus (Shetland) Ltd, T2 Trafford Point, Twining Road, Trafford Park, Manchester, M17 1SH, UNITED KINGDOM



EC-Type certification issued by:
0194: INSPEC, 56 Leslie Hough Way, Salford, Greater Manchester, M6 6AJ, United Kingdom
The descriptions, characteristics, applications and photos are given for information purposes and do not constitute a contractual commitment.
The manufacturer reserves the right to make any modifications it deems necessary.

© 2019 Globus (Shetland) Ltd | RLY-DATA-STREAM_EVO-1119_2